

Model	<u>SuperPro 5000</u>	<u>SuperPro 5004GP</u>	<u>SuperPro 9000U</u>	<u>SuperPro 3000U Cluster</u>	<u>SuperPro 3000U-100</u>	<u>SuperPro 3000U</u>	<u>SuperPro 580U</u>	<u>SuperPro 280U</u>	<u>SuperPro LX</u>	<u>SuperPro Z</u>
Number of devices supported	34,649	34,649	39,005	44,860	44,860	44,860	33,160	22,968	3,906	3,469
Number of pins available	144	x4 stations of 144pins/each	x4 stations of 48pins/each	x4 stations of 48pins/each	48pins & 100pins with included PEP3000 module ³	48	48	48	48	40
PC Interface	USB 2.0	USB 2.0	USB	USB	USB	USB	USB	USB	Parallel	Parallel
Universal Programmer	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Stand-Alone Mode	Yes ¹	No	Yes ¹	Yes ¹	Yes ¹	Yes ¹	No	No	No	No
Gang Programmer	No	Yes	Yes	Yes ²	No	No	No	No	No	No
Free device updates via web	Weekly ⁴	Weekly ⁴	Monthly	Weekly ⁴	Weekly ⁴	Weekly ⁴	Monthly	Monthly	No	No